


TAYE METALWORKS:

LEFT HAND CONVERSION PICTURE GUIDE

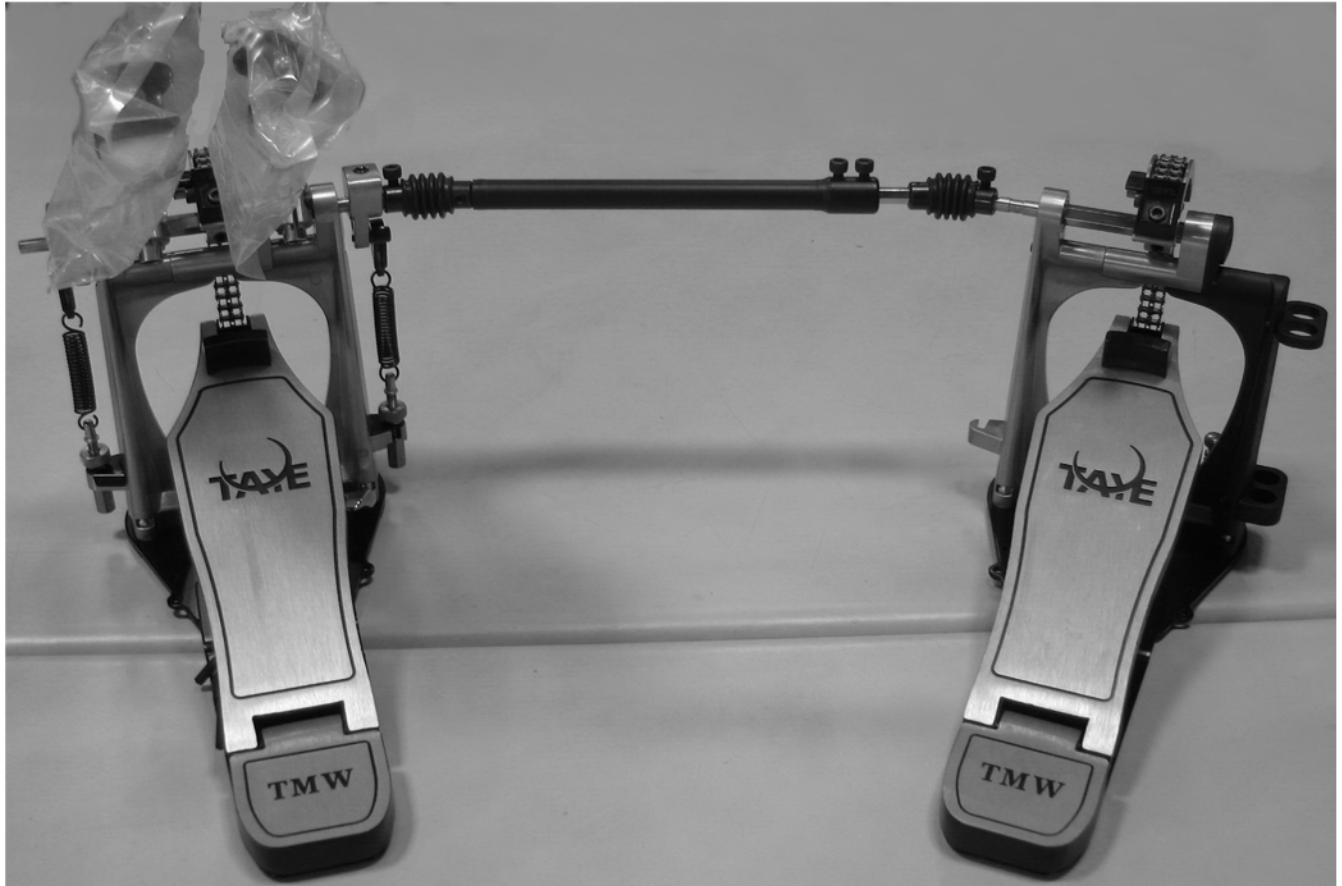


THIS PROCESS REQUIRES YOU TO FULLY DISASSEMBLE AND REASSEMBLE YOUR TAYE METALWORKS PEDAL. PLEASE TAKE YOUR TIME AND MAKE SURE TO COMPLETE EACH STEP BEFORE MOVING ON TO THE NEXT. SEEK HELP FROM A PROFESSIONAL AT YOUR LOCAL DRUM SHOP IF YOU ARE NOT COMFORTABLE WITH PERFORMING THIS PROCESS.




MAIN DRIVE


1.

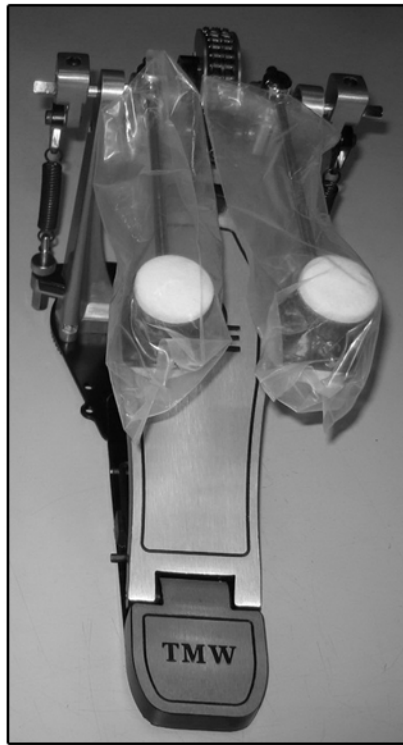


2.

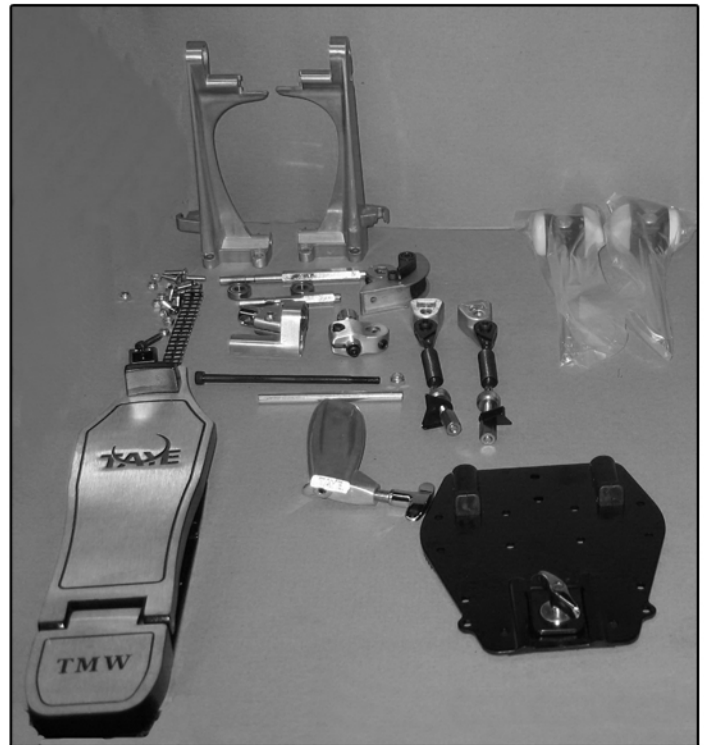

3.

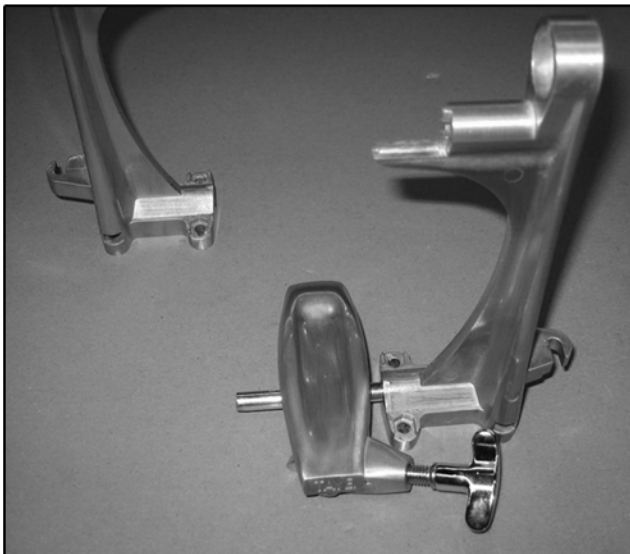


4.

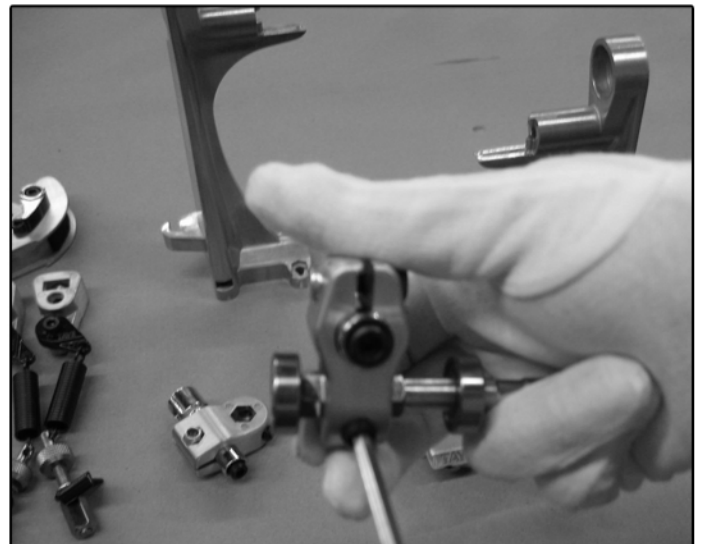


5.




6.

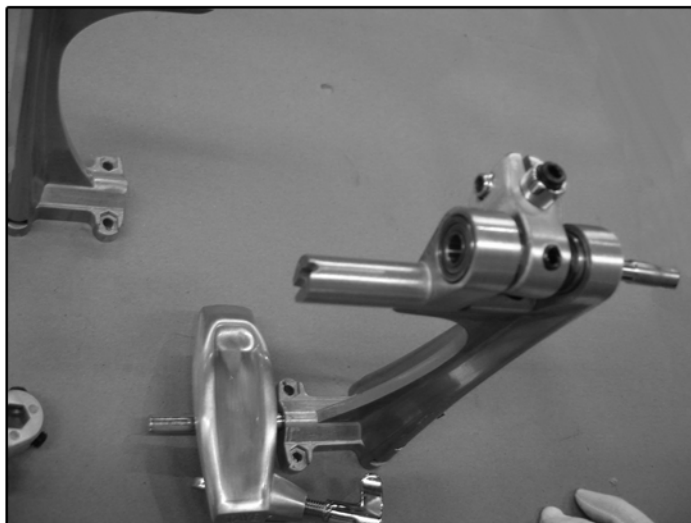


7.

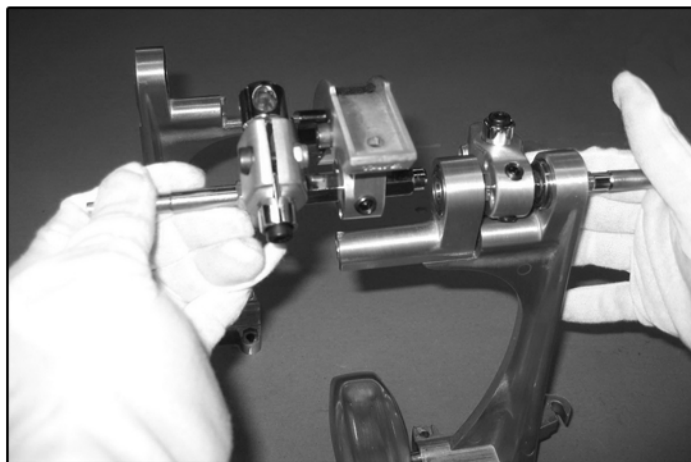


8.

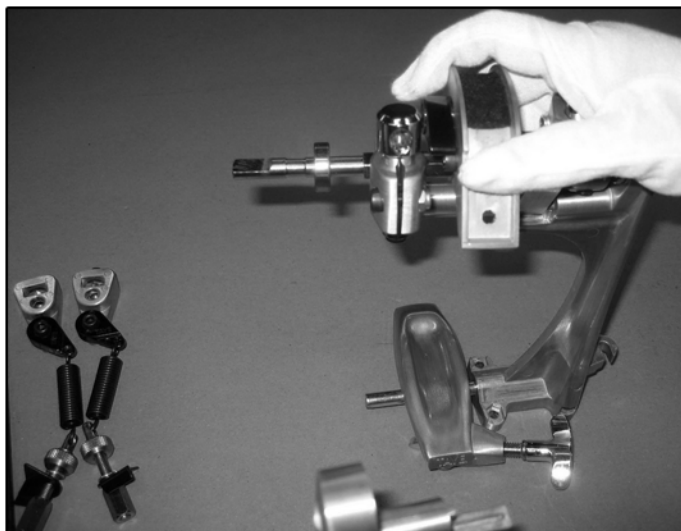

9.

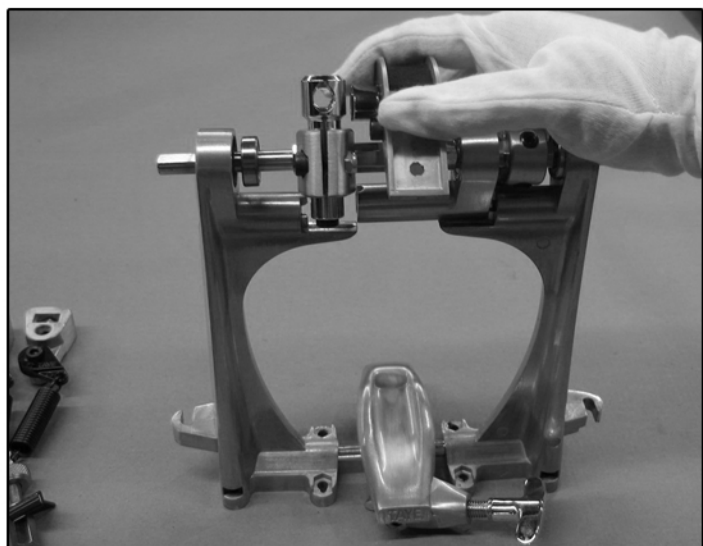


10.

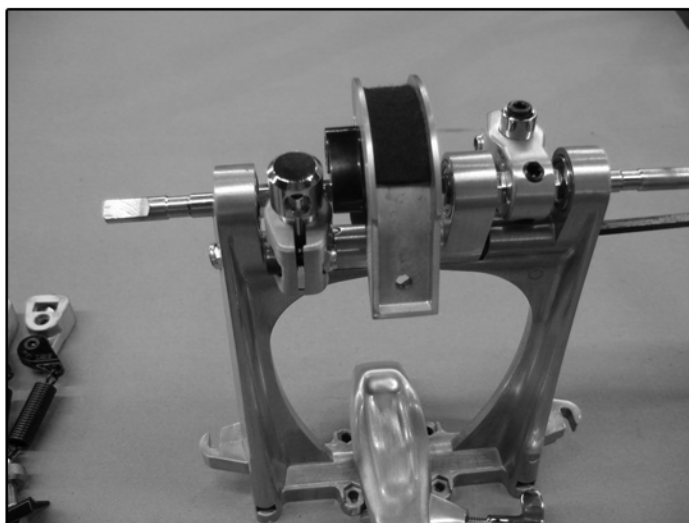

11.



12.

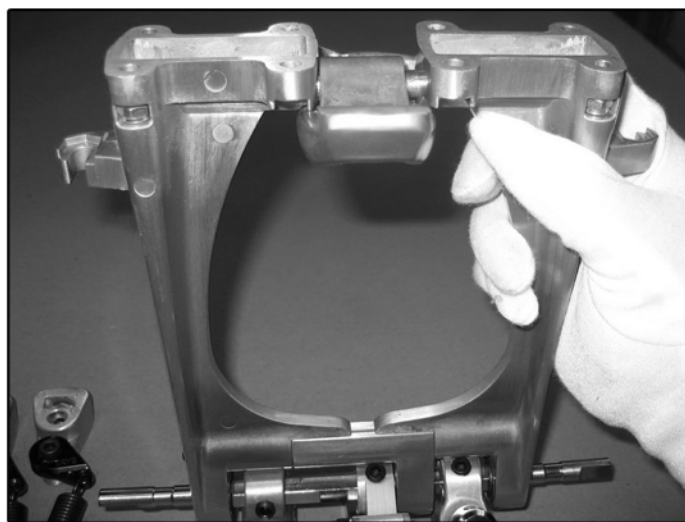


13.




14.



15.

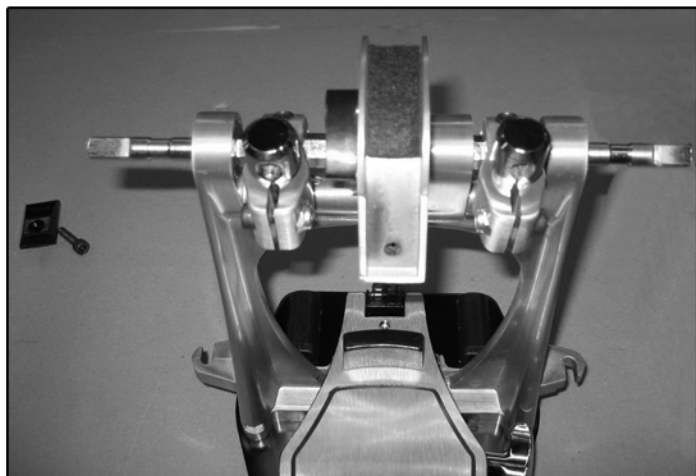

16.

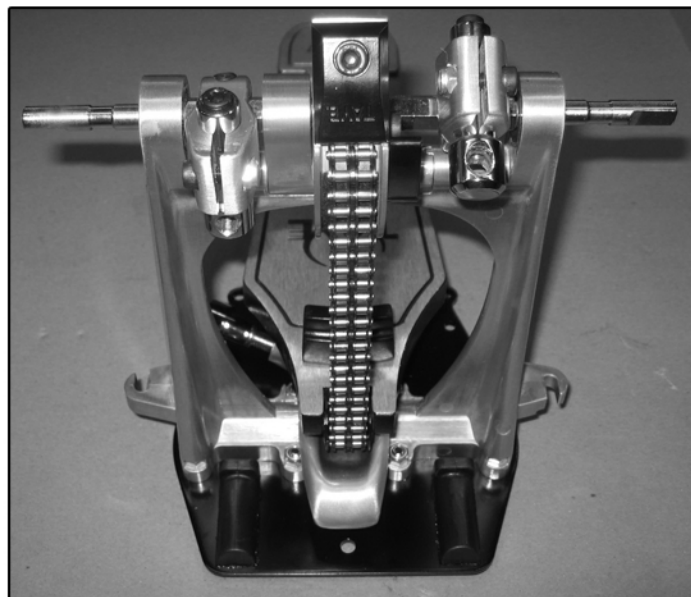

17.




SLAVE DRIVE


1.




2.

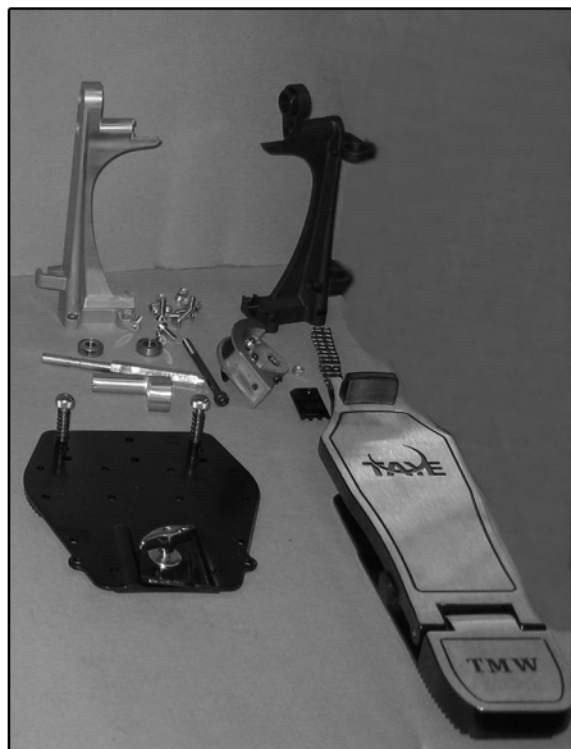


3.

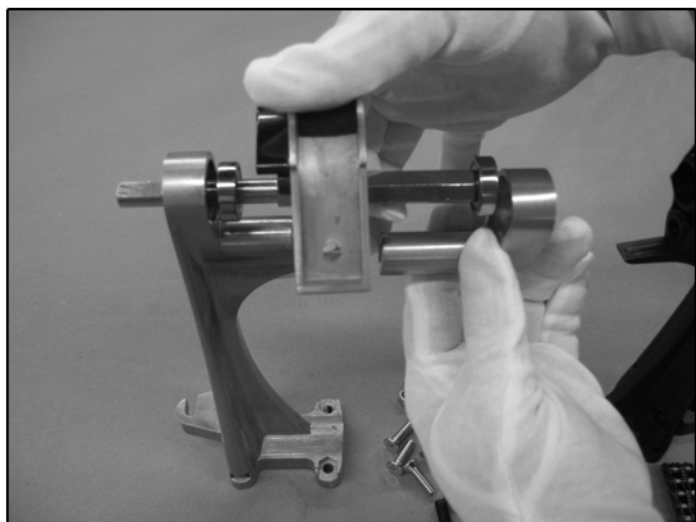

4.

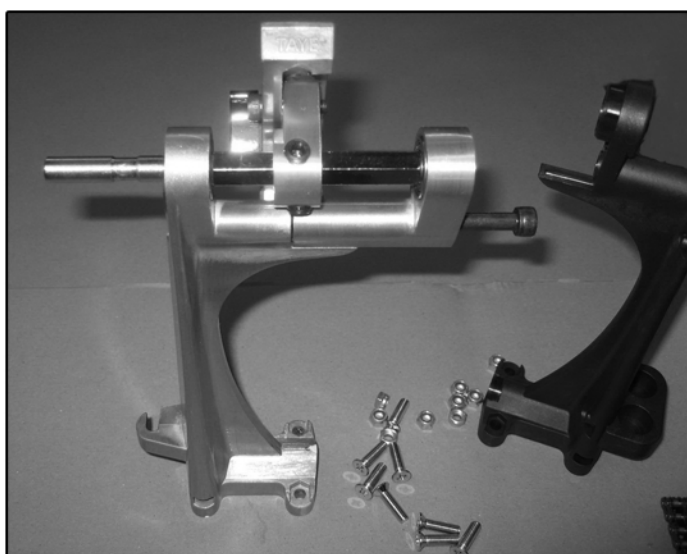

5.

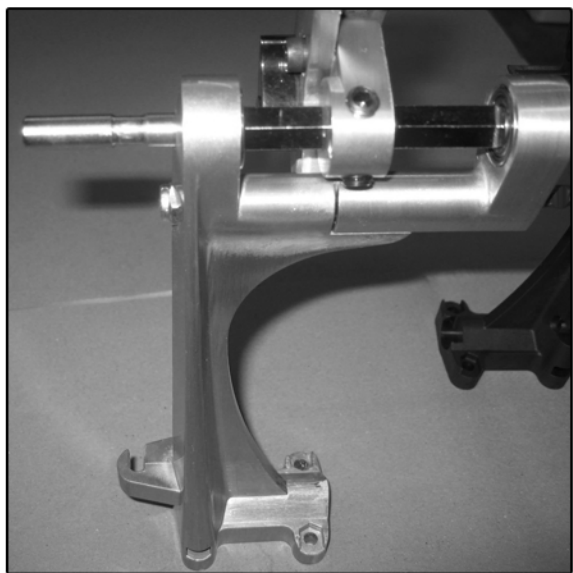

6.




7.




8.




9.

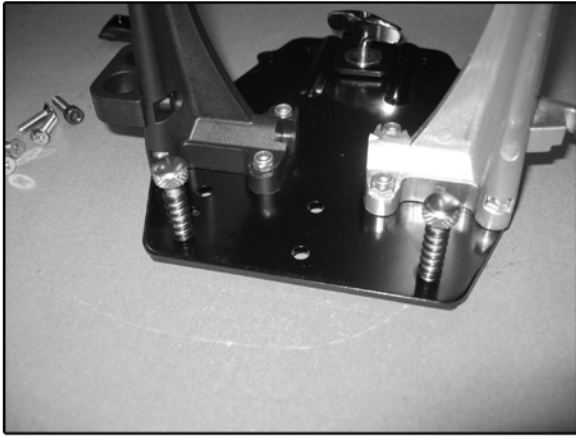


10.

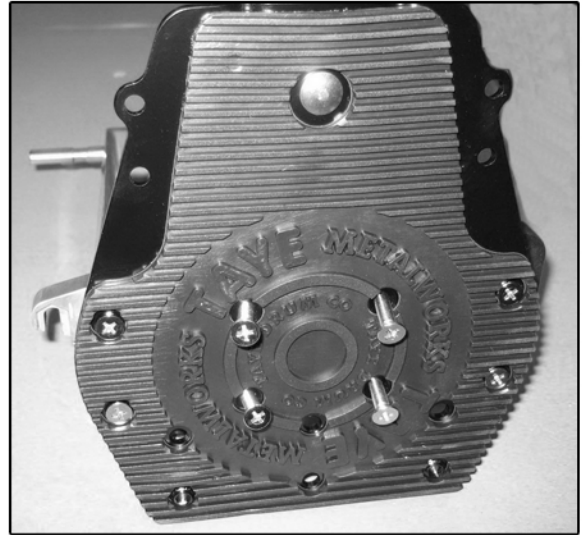


11.

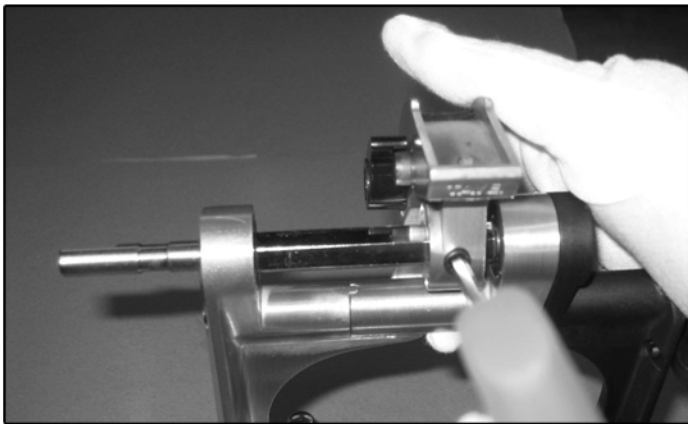

12.

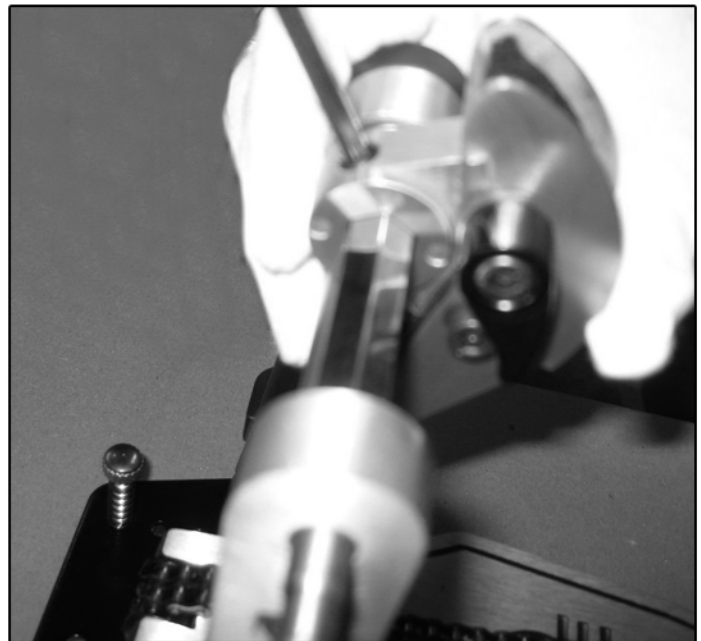

13.

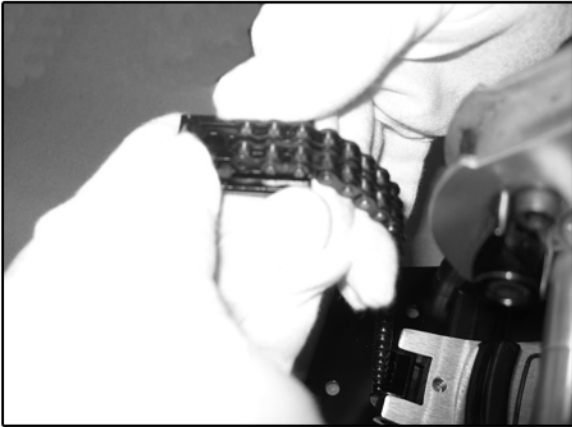

14.

